


High Performance Bushfire Weepa



Installation guide for weep holes in masonry

Step 1

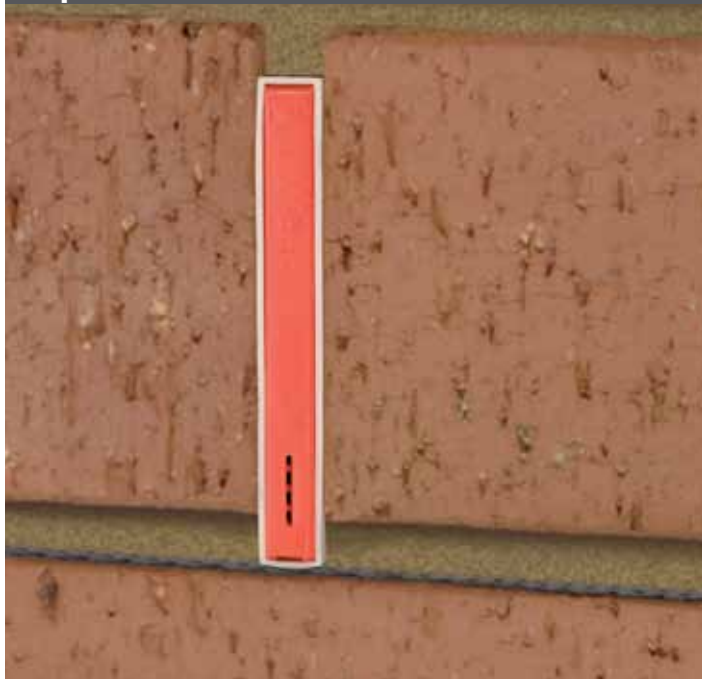

Install the Weepa between bricks or blocks, at specified intervals and firmly in contact with the flashing. For rendering, set out a few millimetres.

Step 2



When rendering, the Weepa needs to be loosened in the masonry so the renderer can adjust the Weepa in and out. Grab internal rib to adjust Weepa in and out.

Step 3



After clean up, use a small, flat screwdriver to prise the mortar cover up at the bottom.

Step 4



The High Performance Bushfire Weepa has a specially formulated grate (with stainless steel mesh set behind) which chars and self extinguishes.

High Performance Bushfire Weepa



Installation guide for weep holes in rendered masonry

Step 1



Make sure the new Weepa is installed when the masonry wall is built.

Step 2



Loosen the Weepa and pull out proud of masonry.

Step 3



Lay on render around the Weepa.

Step 4



Screed off around the Weepa.

Step 5



Pat the Weepa flush with the surface.

Step 6




Float around the Weepa.

Step 7



Sponge finish. For easy removal later, wipe the mortar guard clean now, then again after painting.

Step 8

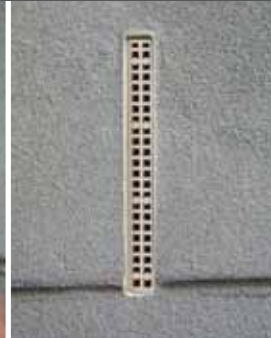

After finish and clean-up remove the mortar guard for beautiful weepholes.